
DVD HOME THEATER SYSTEM

-If Equipped



The available DVD home theater system operates from 120-volt AC household current only, so you must have either the shoreline connected, the generator running, or the inverter turned on (if equipped).

The TV is connected to the Home Theater system, which plays through theater speakers in the lounge area of the coach.

Set TV Video Input

- Turn ON the TV, DVD player, and Video Selection box. (Switch the Video Selection box to DVD for the TV that you are going to use).





- Press INPUT/SOURCE button on the remote or front of TV and select the DVD input on the TV (VIDEO1, COMPONENT, or HDMI-INPUT1, depending on which TV is featured in your coach)..



The TV screen will display the DVD player logo when the correct input is selected.

Play DVD with Theater Sound

- Insert DVD into player. DVD will begin to load automatically. TV screen will typically show “Reading” or “Loading”.
- The DVD may load directly to the main title/menu screen or it may begin to play previews. You may be able to skip previews if desired by pressing the NEXT (CH+ / CH-) button until you see the main menu screen.
- When the main menu screen appears, use the arrow buttons on the remote to select the desired entry or press the

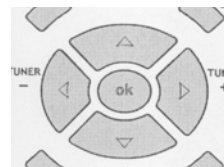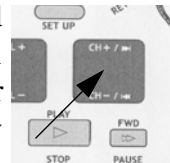

OK or PLAY buttons on the remote (or “Play” button on DVD player) to begin playing the feature.

- Volume is adjusted with the DVD remote (or volume control on DVD player).

TV Sound through Home Theater Speakers

When watching TV programs (broadcast, cable, or satellite), the TV normally plays sound through its own built-in stereo speakers. To connect TV sound output to home theater speakers for a richer sound quality, follow these steps:

- Turn the TV and DVD player ON.
- Select the TV channel you wish to watch.
- Press AUX 1/2 button on the remote or DVD player to set DVD player to AUX1-IN.
- Use the TV Menu button to turn TV speaker off and turn the volume up on the TV and DVD player until you have reached desired level of sound.
- If available, change audio output to “Variable Audio Output.” (See TV owner’s manual for instructions.) This will route TV stereo sound output through the home theater system.



- Select TV channels to watch and adjust theater speaker volume with remote for either the TV or DVD.

NOTE: Turn the volume level up significantly on the DVD player when using the home theater as an amp for the TV through the stereo system.

Audio-Video System Basic Operation Guide

Journey
Express
Meridian
V Class

NOTE: See your InfoCase for specific operating guides for audio and video components.

