
DVD HOME THEATER SYSTEM



The DVD Home Theater System operates from 120-volt AC household current only, so you must have either the shoreline connected, the generator running, or the inverter turned on (if equipped).

The TV is connected to the Home Theater System, which plays through theater speakers in the lounge area of the coach.

 
Set TV Video Input

- Turn ON the TV, DVD player, and Video Selection box. (Switch the Video Selection box to DVD for the TV that you are going to use).
- Press the SOURCE/INPUT button on the TV remote or front of TV and select the DVD input channel on the TV.
*AVI (Standard Definition), or
Component 2 (High Definition)*
- The TV screen will display the DVD player logo when the correct input is selected.



Play DVD with Theater Sound

- Insert DVD into player. DVD will begin to load automatically. TV screen will typically show “READING” or “LOADING”.
- The DVD may load directly to the main title/ menu screen or it may begin to play previews. You may be able to skip previews if desired by pressing the chapter “advance” button until you see the main menu screen.
- When the main menu screen appears, use the arrow buttons on the remote to select the desired entry or press the ENTER or PLAY buttons on the remote (or “Play” button on DVD player) to begin playing the feature.
- Volume is adjusted with the DVD remote (or volume control on DVD player).




TV Sound through Home Theater Speakers

When watching TV programs (broadcast, cable, or satellite), the TV normally plays sound through its own built-in stereo speakers. To connect TV sound output to home theater speakers for a richer sound quality, follow these steps:

- Turn the TV and DVD player On.

- Select the TV channel you wish to watch.
- Place remote into DVD Receiver mode - Press DVD Receiver/TV button twice, until button illuminates to amber color.

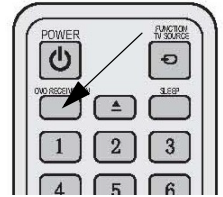

- Press Function (FUNC) button on DVD player or Function/TV Source button on remote to set DVD player to “AUX IN 2”.



- Turn TV and/or home theater volume up.
- Press PL II button on remote and toggle through settings to change audio mode on DVD player to MATRIX.



Turning TV Speakers On/Off

- Press MENU button on remote.
- Select SOUND option.
- Toggle to Speaker Select (External Speaker/TV Speaker) to turn speakers on or off.

Dash Radio Sound through Home Theater Speakers -If Equipped

See "Radio – In-Dash" in Section 3.

Audio-Video System Basic Operation Guide

TOUR

The logo for the Ellipse brand, featuring the word "ELLIPSE" in a stylized, italicized font with a swoosh underline.

*NOTE: See your InfoCase for specific
operating guides for audio and
video components.*



Part No. 161501-11-011
Rev. 1103110228
Copyright 2010 Winnebago Industries, Inc.
All rights reserved.