
BLU-RAY™/DVD PLAYER AND SOUND BAR SYSTEM

(Model 36M)

 
The Blu-ray™/DVD Player and Sound Bar System operates from 120-volt AC household current only, so you must have either the shoreline connected, the generator running, or the inverter turned on (if equipped). The TV is connected to the Sound Bar and Blu-ray/DVD player.

To Watch a Blu-ray

1. Turn “ON” the TV, HDMI Video Selection System, and Blu-ray/DVD player.
2. Determine which TV you want to use (e.g. “Lounge” for lounge TV) and select Source (1) for Blu-ray.



3. Set TV Input to HDMI1 by using the TV remote or the Controls on the TV.
4. Set Blu-ray/DVD player Source to Video by using the Blu-ray/DVD player remote.
5. Insert Blu-ray or DVD into the player. Blu-ray or DVD will begin to load automatically. The Blu-ray/DVD player screen will typically show “LOADING”.
6. The Blu-ray or DVD may load directly to the main title/menu screen or it may begin to play previews. You may be able to skip previews if desired by pressing the chapter “skip”



button on the Blu-ray/DVD player remote until you see the main menu screen.

7. When the main menu screen appears, use the arrow buttons on the Blu-ray/DVD player remote to select the desired entry or press the “Enter” button on the Blu-ray/DVD player remote to begin playing the feature.
8. Volume is adjusted with the Blu-ray/DVD player remote or TV remote.




TV Sound through the Sound Bar (Lounge TV Only)

When watching TV programs (broadcast, cable, or satellite), the TV normally plays sound through its own built-in stereo speakers. To connect TV sound output to the Sound Bar for a richer sound quality, follow these steps:

- Turn “ON” the TV and Sound Bar.
- Select the TV channel you wish to watch.
- Set Sound Bar Source to “AUX” or “D IN” (optical audio in) by using the panel of the Sound Bar or the Sound Bar remote until audio is heard.

- On the Sound Bar Remote, press the input button.

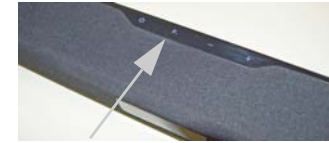

- On the Sound Bar, press the input button.



- Turn TV and/or Sound Bar volume up or down.

Turning TV Speakers On/Off

- Press MENU button on remote.
- Select Sound option.
- Select between Exterior Speaker or TV Speaker.

Further Information

See the manufacturer’s user guide provided in your InfoCase for complete feature descriptions and operating instructions.

Audio-Video System Basic Operation Guide

JOURNEY Meridian

*NOTE: See your InfoCase for specific
operating guides for audio and
video components.*



Part No. 161501-14-025
Rev. 1401131001
Copyright 2013 Winnebago Industries, Inc.
All rights reserved.