
DVD PLAYER

-If Equipped



The player is connected directly to the TV with a composite video cable (red, yellow, white).

Refer to the manufacturer's information provided in your InfoCase for complete feature descriptions and operating instructions.

Set TV Video Input

- Turn TV and DVD player ON.
- Press the SOURCE button on the TV or the remote to select "VIDEO" input.
- The TV screen will display the DVD player logo when the correct input is selected.



Play DVD

- Press "OPEN/CLOSE" on DVD player to open tray.
- Insert a DVD "face up" on to tray and press "OPEN/CLOSE" to close tray.
- The DVD will begin to load automatically. The TV screen will typically display "Reading" or "Loading".

- The DVD may load directly to the main title/menu screen or it may begin to play previews. You may be able to skip previews if desired by pressing the "Next" button on the DVD remote until you see the main menu screen.



- When the main menu screen appears, press the "Enter" button on the remote or "Play/Pause" button on DVD player to begin playing the main feature. Use the arrow buttons on the DVD remote to select another feature to play.
- Volume is adjusted with the DVD remote.

 


Further Information

See the manufacturer's quick reference guide provided in your InfoCase for complete feature descriptions and operating instructions.

DVD PLAYER

-If Equipped



The player is connected directly to the TV with a composite video cable (red, yellow, white) or HDMI cable.

Refer to the manufacturer's information provided in your InfoCase for complete feature descriptions and operating instructions.

Set TV Video Input

- Turn TV and DVD player ON.
- Press the SOURCE button on the TV or the remote to select "VIDEO" input.
- The TV screen will display the DVD player logo when the correct input is selected.



Play DVD

- Press "OPEN/CLOSE" on DVD player to open tray.
- Insert a DVD "face up" on to tray and press "OPEN/CLOSE" to close tray.
- The DVD will begin to load automatically. The TV screen will typically display "Reading" or "Loading".

- The DVD may load directly to the main title/menu screen or it may begin to play previews.



- You may be able to skip previews if desired by pressing the chapter "advance" button on the DVD remote until you see the main menu screen.
- When the main menu screen appears, use the arrow buttons on the DVD player remote to select the desired entry or press the "+" or PLAY buttons on the

DVD player remote (or “Play” button on DVD player) to begin playing the feature..

- On the DVD player, press the PLAY button.



- On the DVD player Remote, press the “+” or PLAY button.

- Volume is adjusted with the DVD remote or TV remote.

Further Information

See the manufacturer’s quick reference guide provided in your InfoCase for complete feature descriptions and operating instructions.

Audio-Video System Basic Operation Guide

Minnie Winnie
Premier

Spirit
Silver

NOTE: See your InfoCase for specific operating guides for audio and video components.

